
BZAM -ness DISTILLATE VAPE CART GUIDE

Get the best experience possible from your distillate vape cartridge by following this guide. Please note: new cartridges are approximately $\frac{3}{4}$ full, which leaves enough space for your vape to function properly.

TROUBLESHOOTING

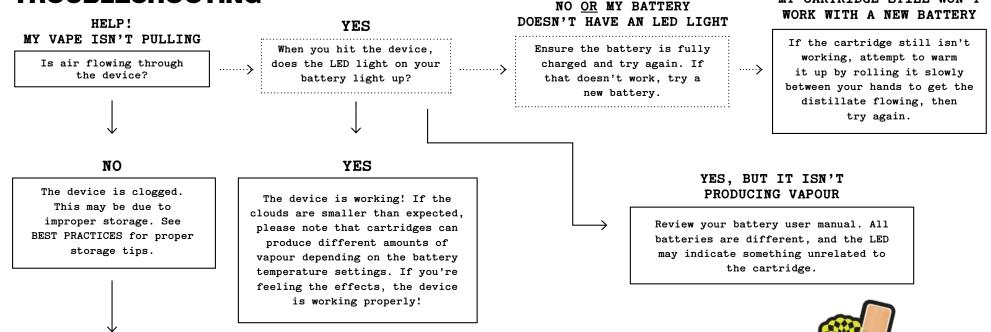

BEST PRACTICES

GENERAL USE

- * Before first use, remove the silicone covers from the cartridge and ensure the battery is fully charged.
- * Be careful not to over-tighten when attaching the cart to the battery.
- * Ensure vents are not covered when inhaling.
- * Do not tamper with the vape cart or battery.

BATTERY TIPS

- * Our carts work best with 510-thread batteries with minimum 4W/2.5V power; auto-draw batteries are not recommended.
- * All batteries are different! Always read the instruction booklet that came with your battery prior to use.

STORAGE

- * When not in use, it's best to disconnect the cartridge from the battery and store them at room temperature in a dry location - never get it wet or submerge it in water.
- Store your device in an upright position whenever possible.
 Do not expose your vape cart to extreme temperatures such
- as near a heater, in a hot car or outside in the cold.
- * If you've left your vape in the cold and the oil has solidified, this can cause the cart to malfunction. Bring it back to room temperature before using it again.



MY CARTRIDGE STILL WON'T